

CS1001 - Chain or Cord Retaining Tension Device Fitting Instructions


1. Remove clear plastic stopper at the bottom of the tension device.



- A. Pull tensioner apart



- B. using a pen or screwdriver carefully push the stopper out.

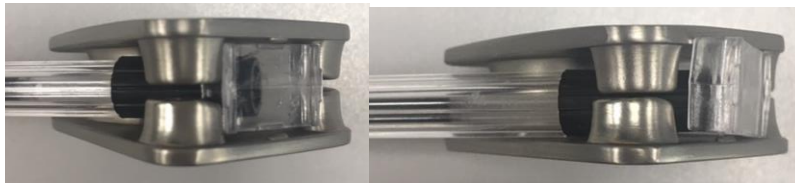

2. Twist the front part of the device until this comes off from the back.



3. Attach the back of the device on to the wall using the 2 holes and attach chain



4. Twist the front of the device back on to the back until the dents at the top are aligned.



5. Attach the clear stopper back in place at the bottom of the device to stop the tensioner from being twist open.