



## HOW TO CENTRE YOUR MASTERSLIDES

1. Ensure that both Masterslides are in the fully open position
2. Pull on the outer draw cord to move the Overlap Masterslide to the far end of its side of the rail.

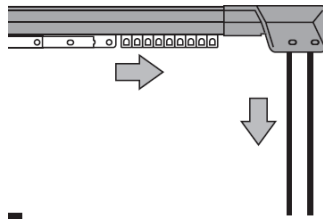

3. Holding both draw cords tightly, lift the cord off the rear peg of the Underlap Masterslide and hold the cord while moving the Masterslide by hand to the far end of its side of the rail. Take care not to lose the cord that you have removed from the peg in the recess of the rail
4. Twist the cord from the Underlap Masterslide over the bottom rear peg on the Masterslide, creating a loop.

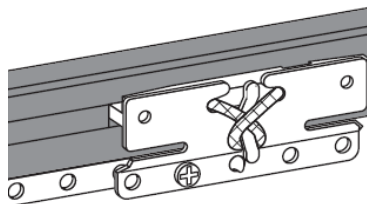

5. Gently pull one draw cord to tighten the loop over the Masterslide peg. Check the operation of the Masterslides to ensure that they meet in the centre of the track. Re-adjust if necessary