



Eve Motion Roman Blind Programming Instructions

(Via App)

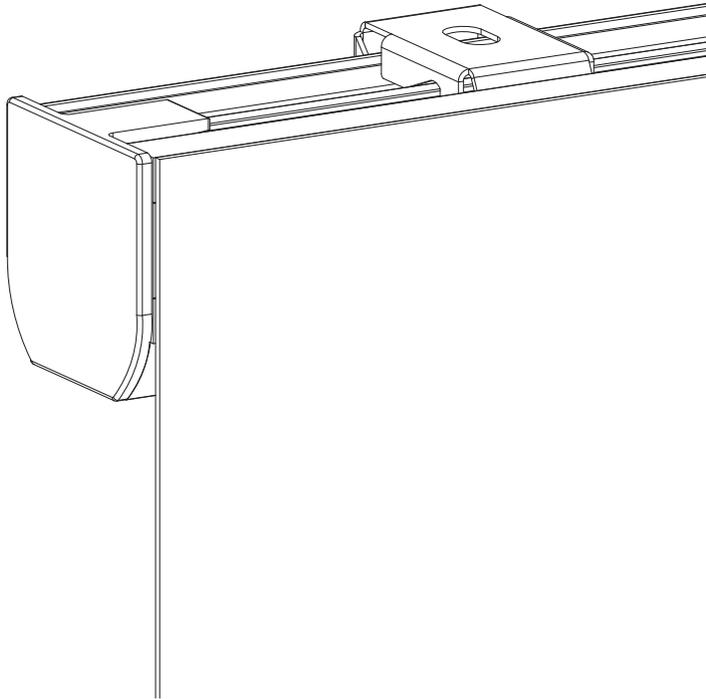


i Buttons and functions

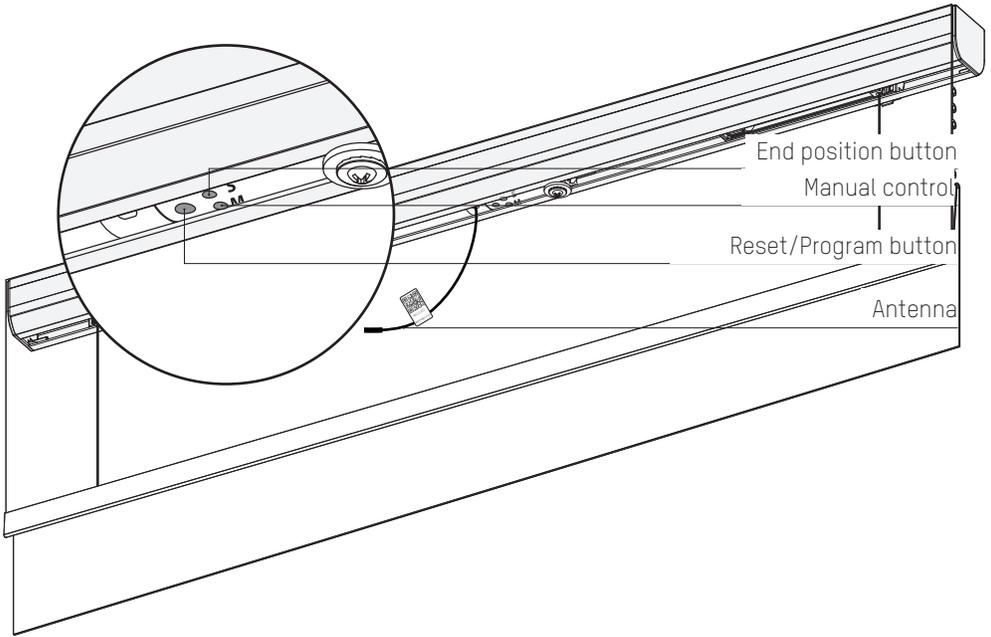

1 Install the blind

Follow the steps in the installation instructions to install the blind.

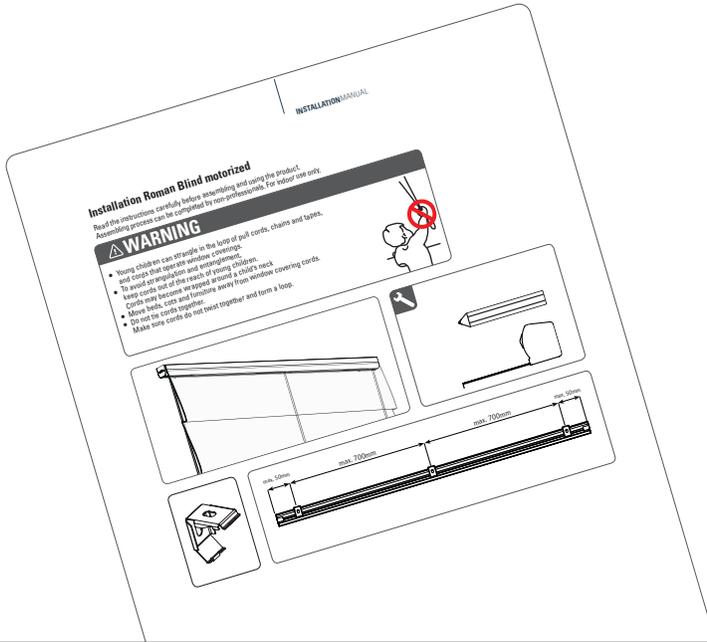


2 Connect power supply

IMPORTANT:

Only connect CM21 (12VDC transformer) or CM38/CM39 (rechargeable battery tube)

Hold the program button and press manual control button twice to activate or deactivate the motor. (When the motor is activated the motor will step up and down)

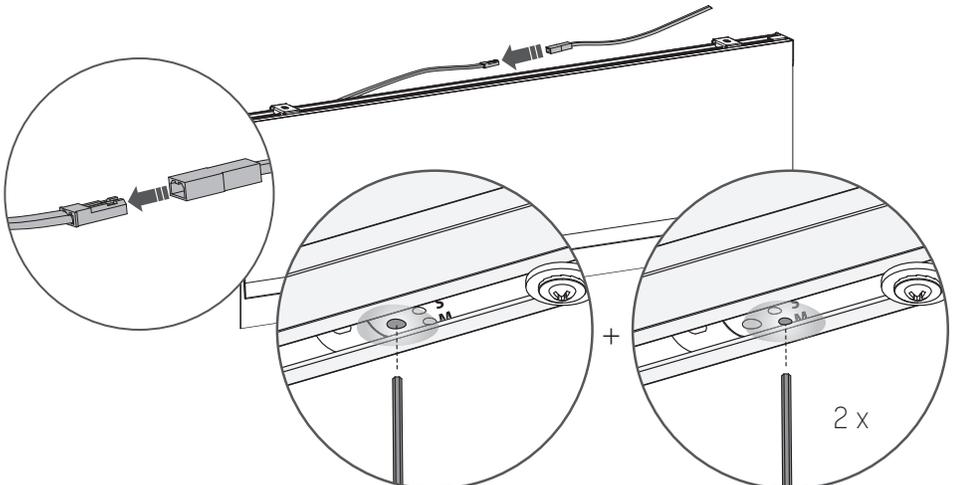

3 Add Eve MotionBlinds to your platform

Add Eve MotionBlinds to the platform of your choice and make sure to have a compatible Thread Border Router.

More information : motionblinds.com/eve/matter




4 Setup the blind

Now you can easily add Eve MotionBlinds to your smart home in just a few steps by scanning the Matter Setup Code using the app of your favorite platform. Scan the Matter Setup Code to add it your platform.

Eve MotionBlinds needs end positions to work properly. End positions can be programmed in two ways. In the Eve app or by the end position programming button on your blind. (Step 5)


After scanning you can hide your Matter Setup Code.

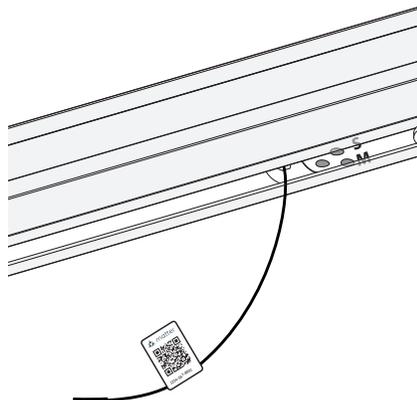

5 Set end positions


Beside setting the end positions by the app you are able to set the end positions by pressing the button on the motor. Press the manual control button and hold until the blind has reached the bottom position. If the blind moves in the opposite direction, release the button and hold again.

Adjust until the desired bottom position has been reached.

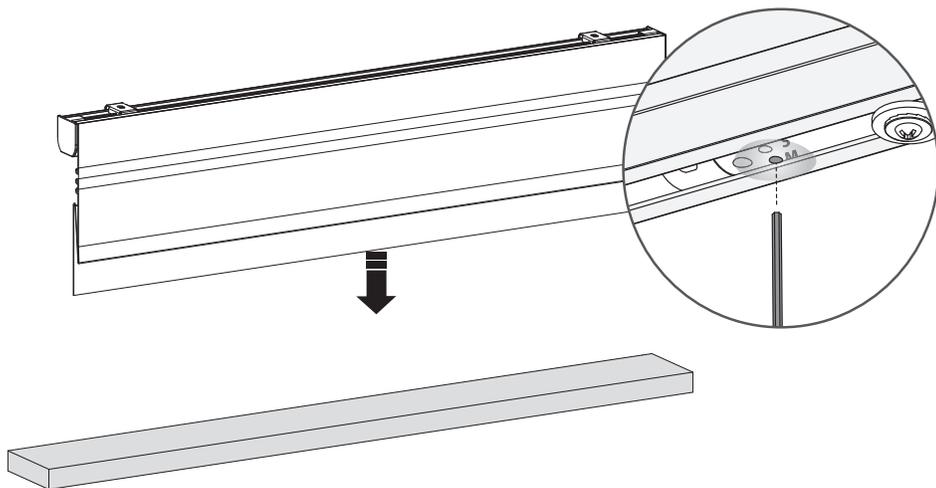

6 Save your bottom position


When your blind is positioned at your bottom position hold the button until the blind moves up and down to save your bottom position.

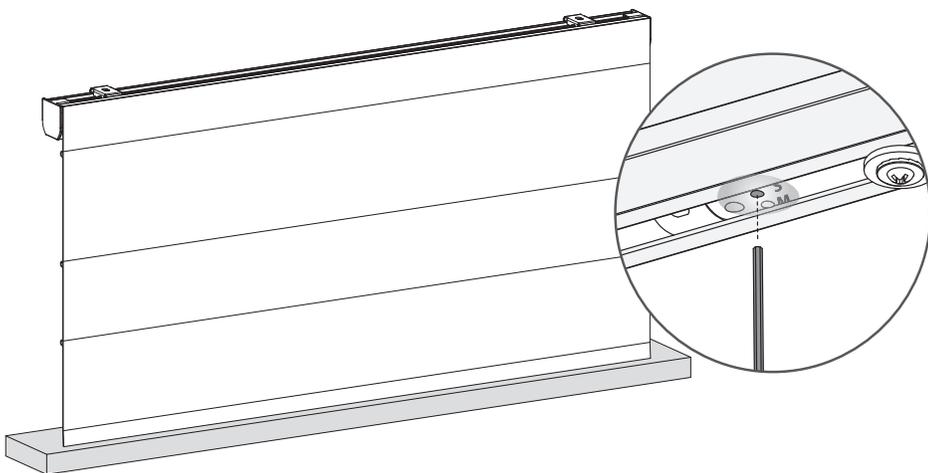

7 Move your blind to the top position


Press the manual control button until the blind has reached the top position. If the blind moves in the opposite direction, release the button and hold again.

Adjust until the desired top position has been reached.

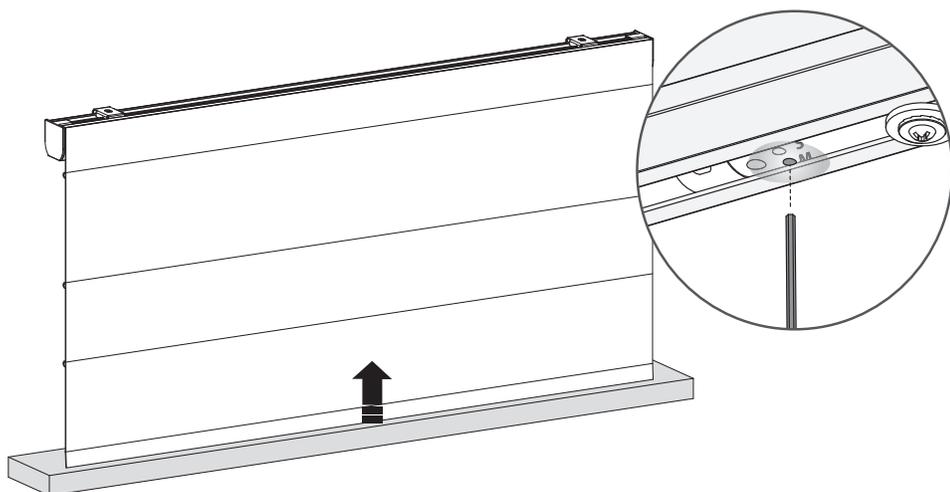


8 Save your top position

When your blind is positioned at your top position hold the button until the blind moves up and down to save your top position.

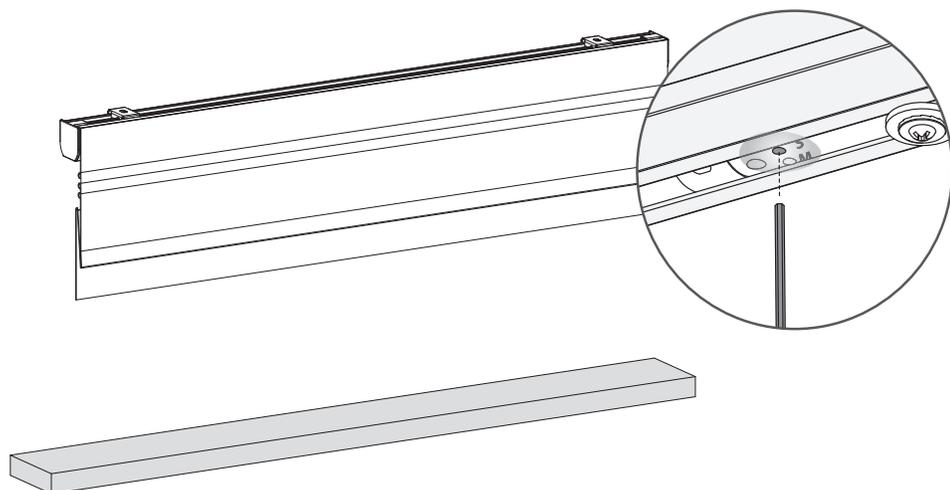


9 Adjust your end positions

To adjust one of your end positions you need to place your blind at the end position you want to adjust. Shortly press the manual control button and wait until the blind has reached the end position you want to adjust.

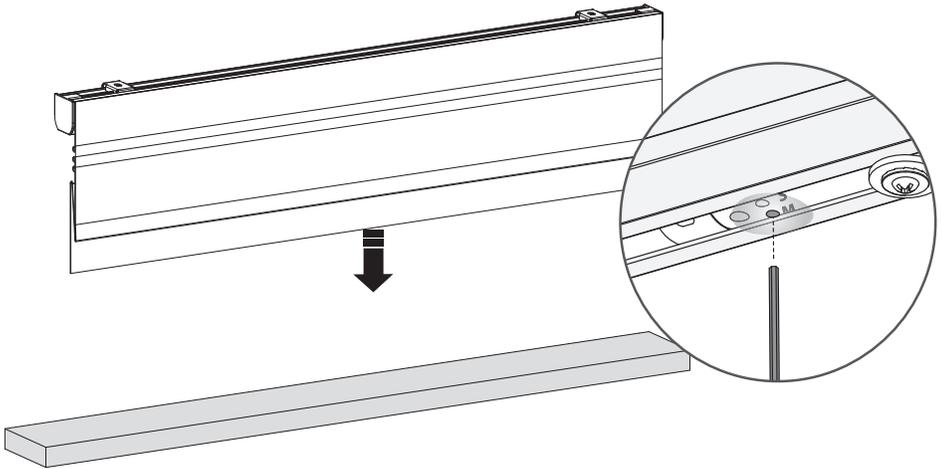

10 Remove your (bottom/top) position


Hold the end position program button for 3 seconds to remove your (bottom/top) position. The blind will step up and down once to confirm that your end position has been removed. You are now able to set a new (bottom/top) position.

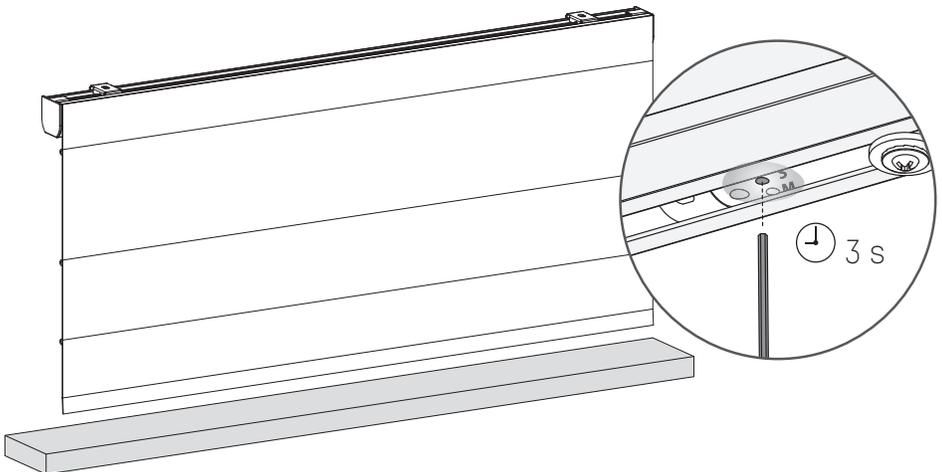

11 Move your blind to the new (bottom) position


Press the manual control button and hold until the blind has reached the bottom position. If the blind moves in the opposite direction, release the button and hold again.

Adjust until the desired bottom position has been reached.

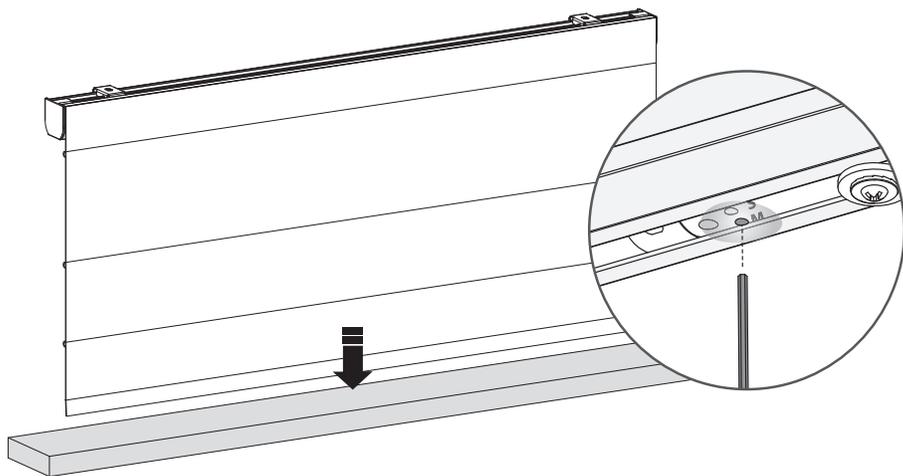


12 Save your (bottom) position

When your blind is positioned at your bottom position hold the button until the blind moves up and down to save your bottom position.

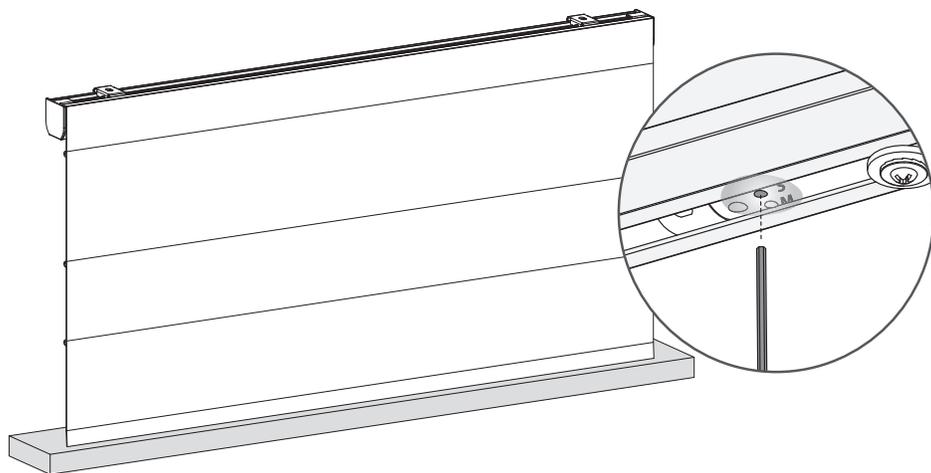


13 Save the favorite position

When there is no favorite position programmed you need to position your blind at your favorite position. When the blind is at your favorite position hold the manual control button until the blind steps up and down once. (Approximately 7 seconds)

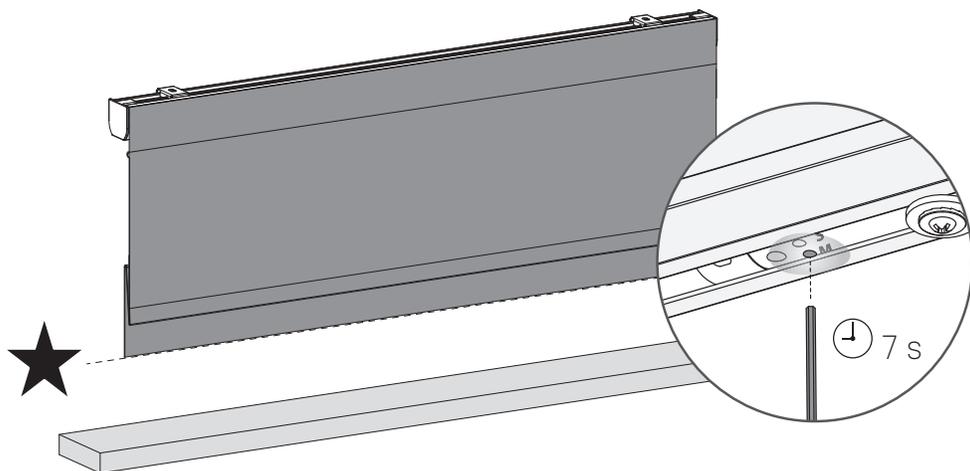


14 Control your blind to favorite position

When your blind is not positioned at the favorite position hold the manual control button for 5 seconds and your blind will move to its favorite position.

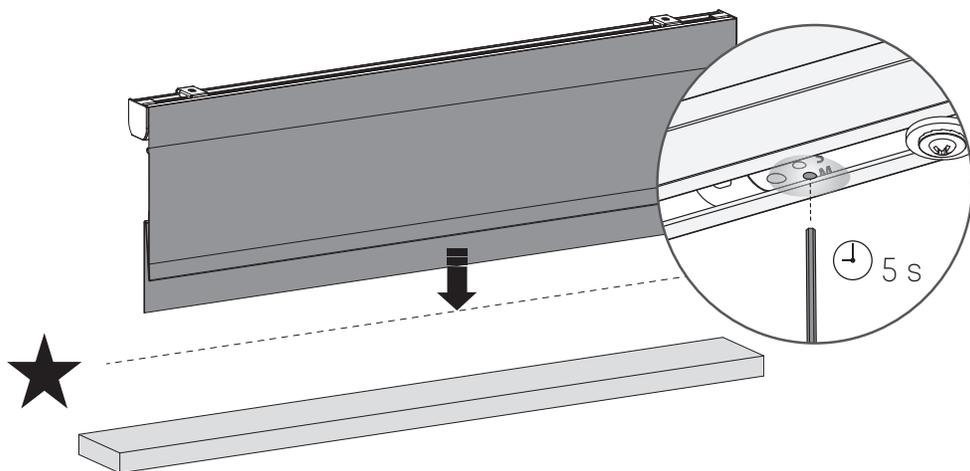


15 Save a new favorite position

To remove your previous favorite position you need to place your blind at your current favorite position. (Step 14) Then hold the manual control button until the blind steps up and down once. (Approximately 7 seconds) Your favorite position is now removed. Follow step 13 to set your new favorite position.

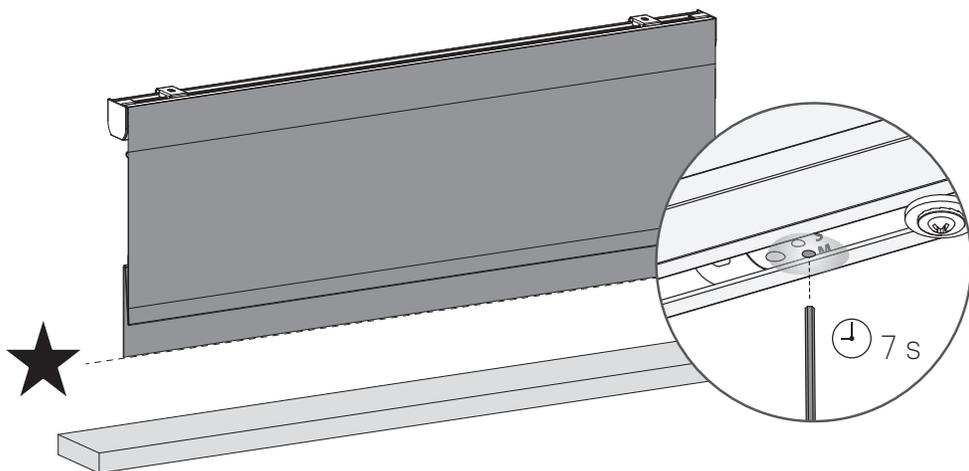


i Change direction of rotation

If the position of the blind in the app is opposite to your blind, change the direction of rotation by pressing the End Position button twice within one second.

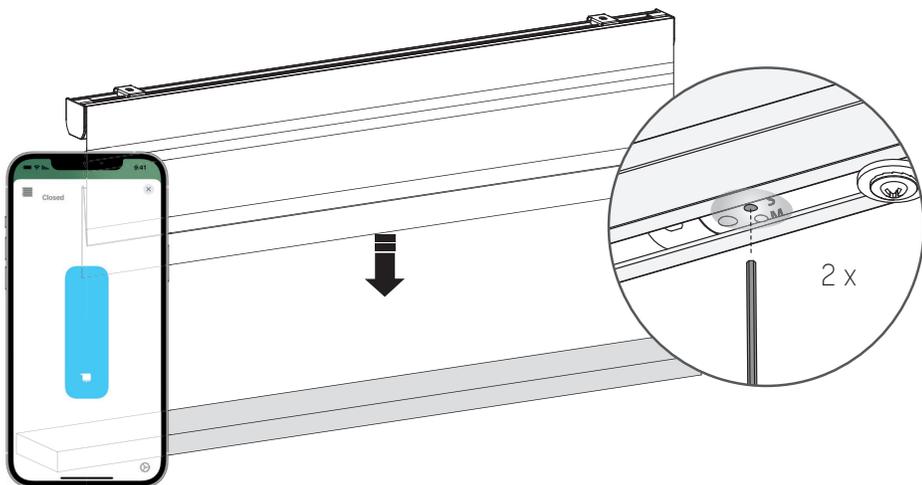


i Change motor speed / sound level

Hold the program button for 5 seconds to change the motor speed / sound level. The blind steps up and down 1 time to indicate that the speed has been adjusted to 1 of the 3 levels. Warning: release the button after 5 seconds when the blind steps up and down to avoid resetting the connection.

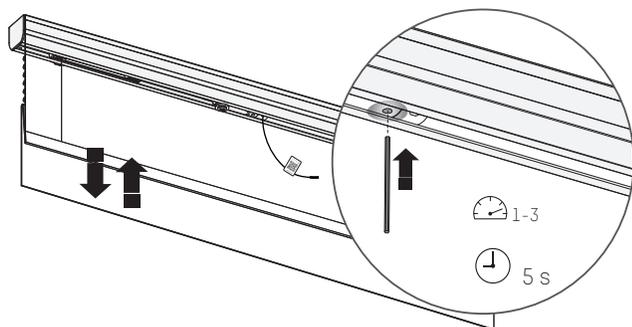


i Reset the connection

Hold the program button for 10 seconds to delete the connection between the blind and the app. The blind steps up and down 1 time to indicate that the connection is reset. Now the blind can be reconnected.

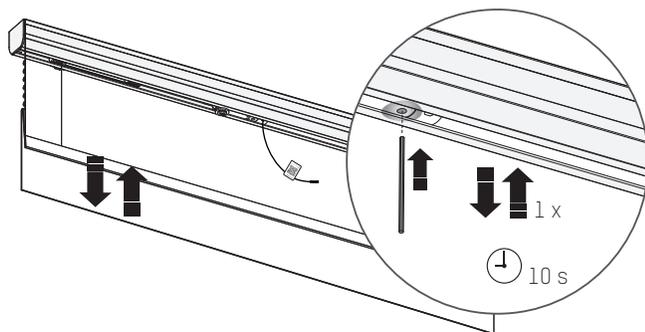

i Reset the blind

Resetting the blind results in deleting the end positions and connections of the blind with apps and remote controls. Shortly press the program button to activate program mode. The blind will start stepping up and down. Hold the reset/program button for at least 20 seconds to reset the blind. The blind will stop stepping twice. After the second stop, the blind will give one extra step to indicate that it has been reset.

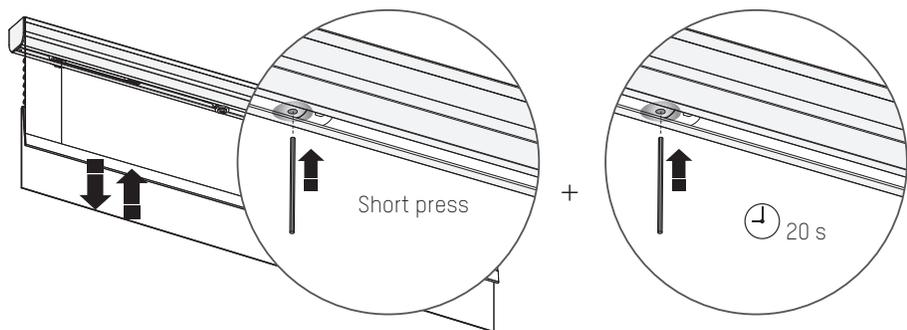

Distributed By:



HALLIS HUDSON
Committed to excellence

Hallis Hudson, Unit C34, Red Scar Business Park,
Longridge Road, Preston, PR2 5NN
Email: Sales@hallishudson.com