Perfect Fit Shutter Lite Measuring & Fitting Instructions



Perfect Fit

SHUTTER LITE

Measuring & Fitting
Instructions

Before fitting, check to see if there are any obstructions, i.e. vents or handles, which would affect the smooth operation of the blind. Make an allowance for these when fitting the blind.

MADE TO MEASURE SHUTERS

Perfect Fit Shutter Lite Measuring & Fitting Instructions



MEASURING INSTRUCTIONS

Make sure to record all measurements in millimetres

Gaskets (Fig 1)

Measuring from gasket to gasket take 3 measurements from the bottom, middle and top of the glass size width and make a note of the smallest measurement accurate to the nearest millimetre. (Fig. 1)

Glass Size

Do the same for the glass size height, taking measurements from the left, middle and right of the glass and making a note of the smallest measurement to the nearest millimetre.

Bead Depth (Fig 2)

Place a credit card over the corner of the window where the glass meets the gasket and take a note of the measurement from the glass to the edge of the card, this will be your bead depth and will determine what size bracket to use. (Fig.2)


Repeat (Fig 3)

Repeat steps 1-3 for the top window. (Fig.3)


Handle (Fig 4)


If the window has a handle then take a measurement from the left hand gasket to the centre of the handle plate and make a note of the measurement. (Fig.4)



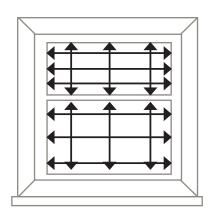



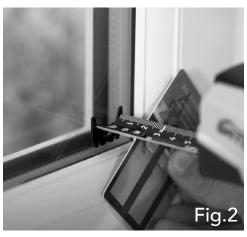

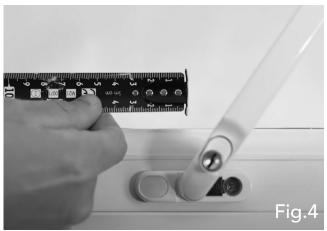

Perfect Fit Shutter Lite Measuring & Fitting Instructions



INSTALLATION INSTRUCTIONS

Slot the brackets (Figs 1-3)

Using a credit card as a guide slot a bracket into the corner of each gasket seal on the bottom window. (Fig.1) (Fig.2) Repeat for the top window. (Fig.3)

Line the cut out (Fig.4)

Once all brackets are in place the shutter is ready to be installed. Line the cut out in the bottom of the frame with the bottom brackets. (Fig.4)

Push the Frame into the brackets (Fig 5)


Once the bottom of the frame is clipped in, push the top side of the frame into the top brackets. (Fig.5)

Repeat (Fig 6)

Repeat steps 1-3 for the top window. (Fig.6)

Finished

Your Perfect Fit Shutter is now installed.

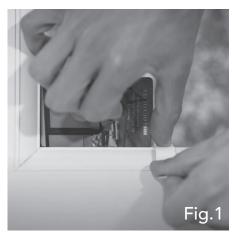













MADE TO MEASURE SHUTTERS

